



Keeping Our Customers Successful



www.tkmold.com



+86-755-2369 0000



sales@tkmold.com

Who We Are



42+ years experience on mold fabrication.

1000+ experienced staff.

Annual mold capacity **1000 + sets & 7000+ cavities.**

TK Technology Park is **180,000 m². (25 football fields).**

No. 1 exporter of plastic injection mold with an MT3 class of China in 2015.

History Milestones

1983

First Tooling Workshop
Started up in Hong Kong



Started Injection
Molding Business

1985

1995

Tooling Factory
Moved to Shenzhen



2006

TK Technology
Park Founded



2010

Set up East China
Manuf. Base



2013

HK IPO (2283.HK)



2014

Built Up TK MOLD
GERMANY GmbH &
Acquisition of Nypro



2019


Joint-Venture with
FISAS NAVARRO in
Barcelona



2023

40 Years



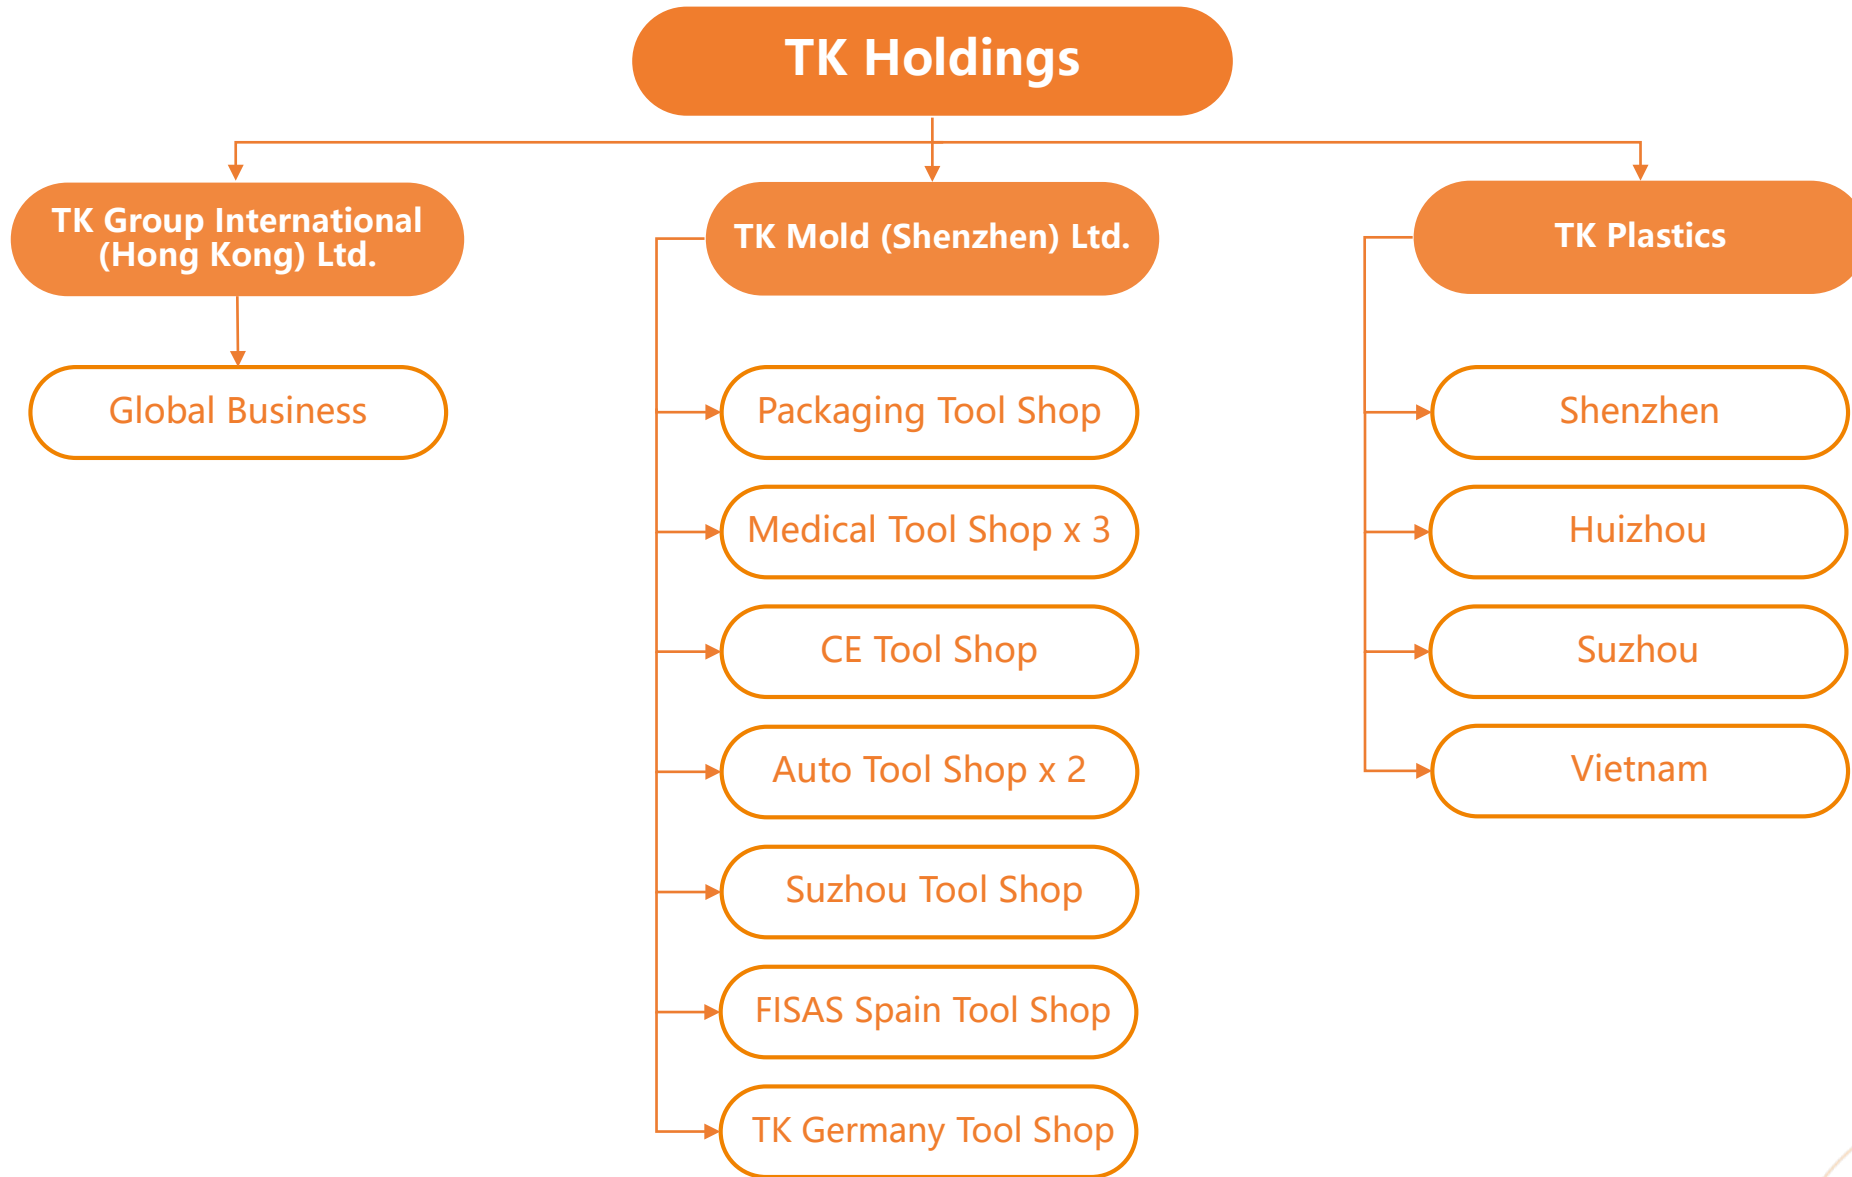



AEO Advanced

Since 2020.09.11



Carbon Footprint Verification (CFV)

Since 2025.02.21



EcoVadis award 52/100

2025.01.09-2026.01.09



ISO 9001

2023.2.25-2026.2.24




ISO 14001


2022.12.16-2025.12.15




ISO 45001

2022.12.24-2025.12.23

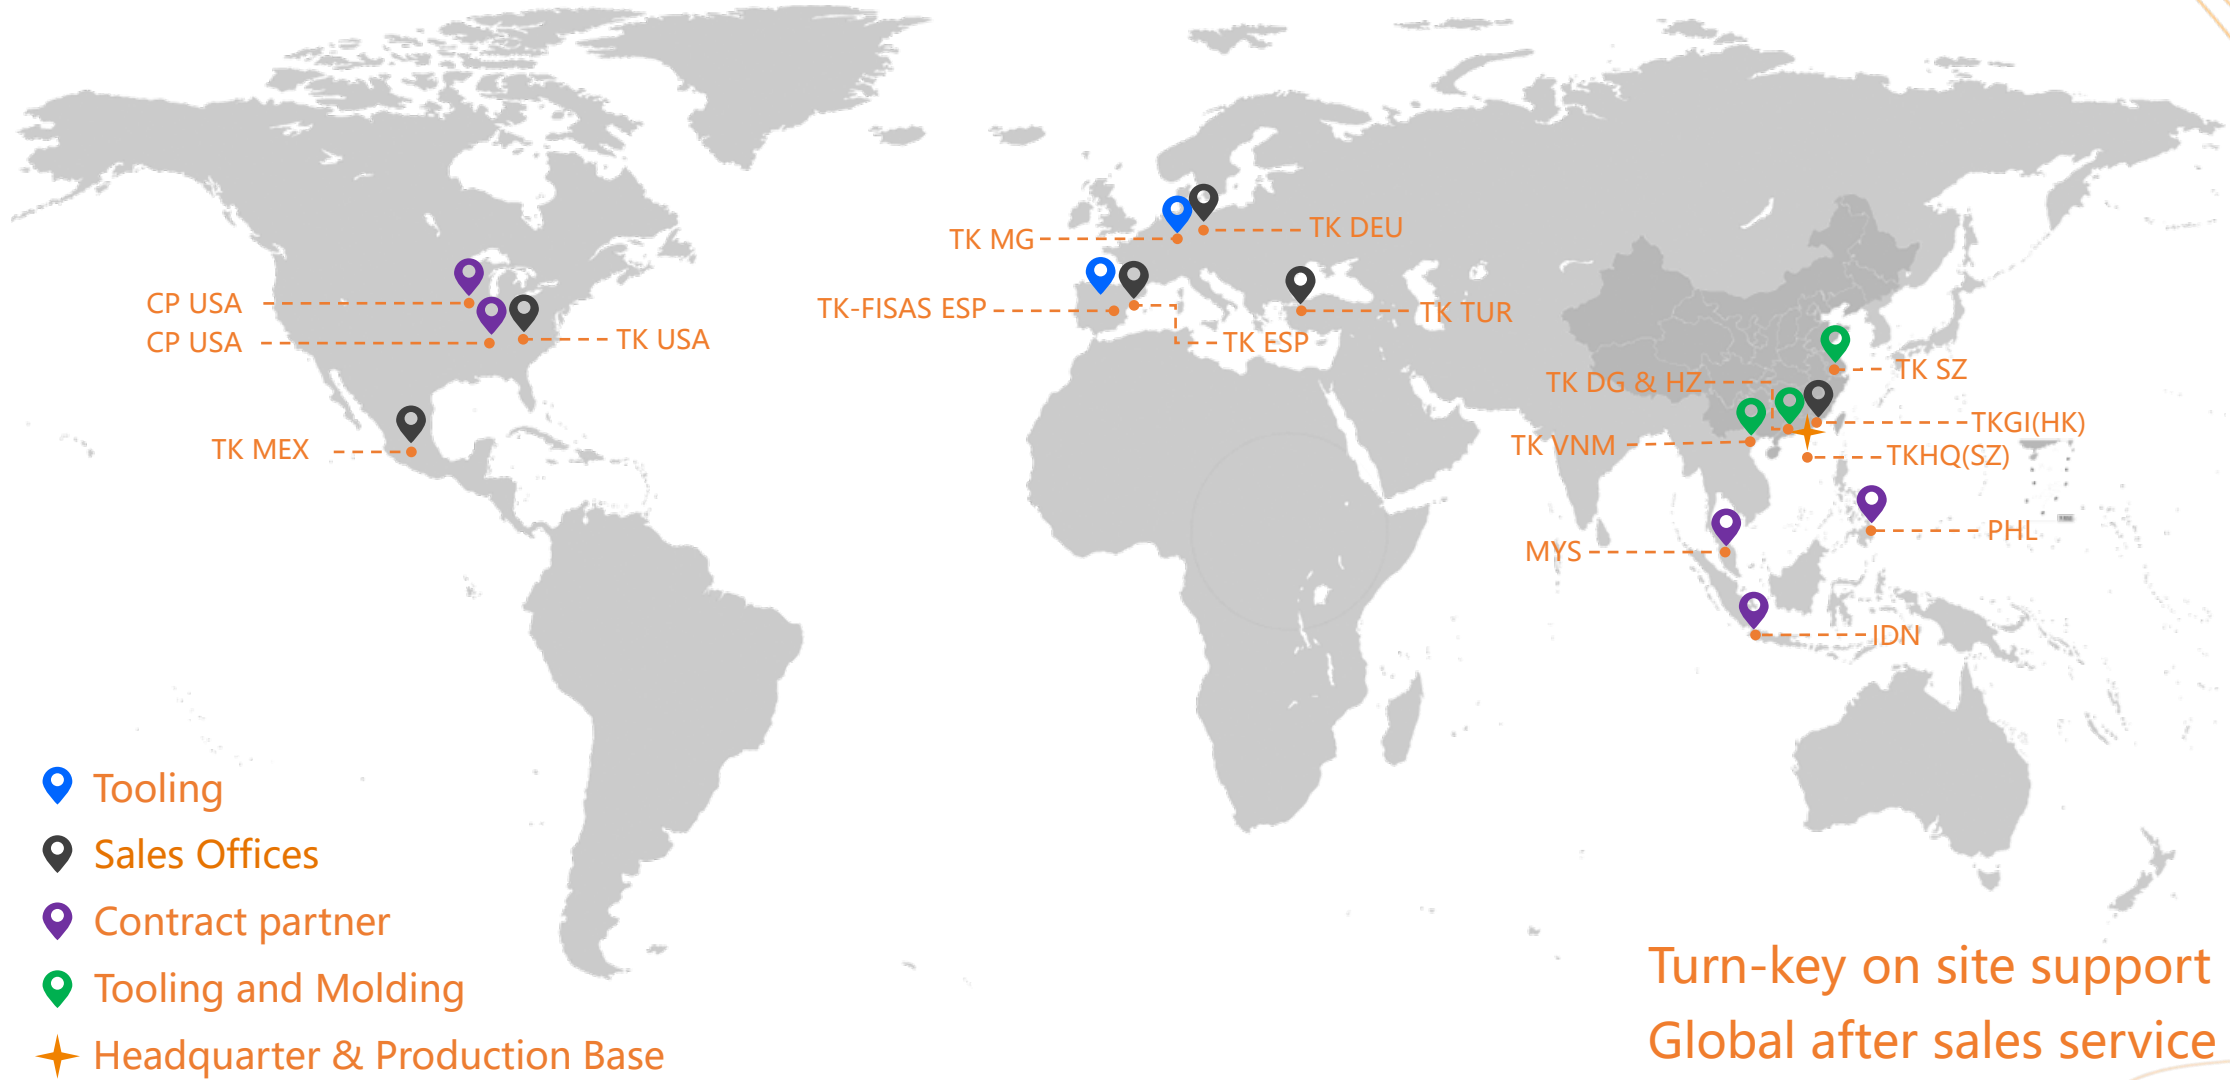

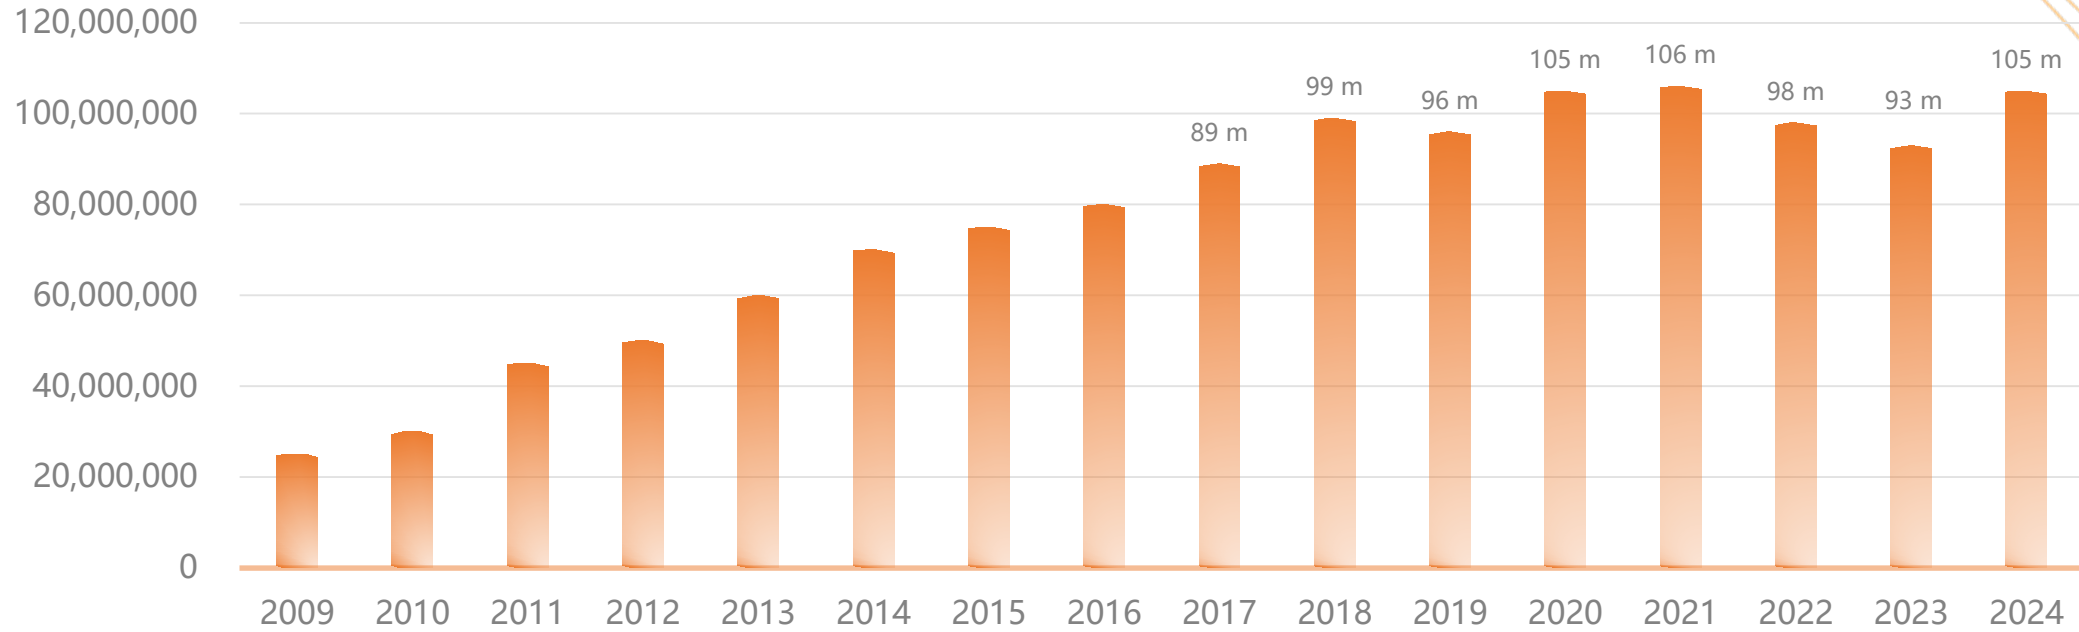


TKM

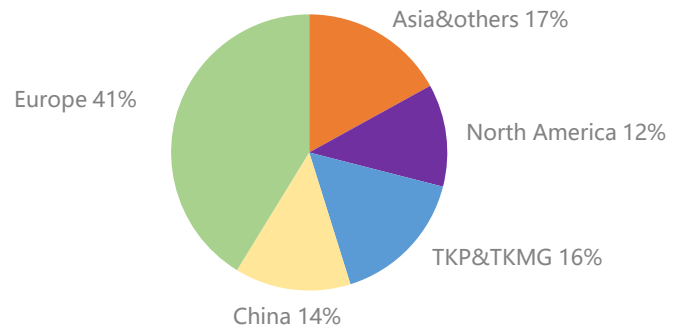

Asia&others North America TKP&TKMG China Europe

PM

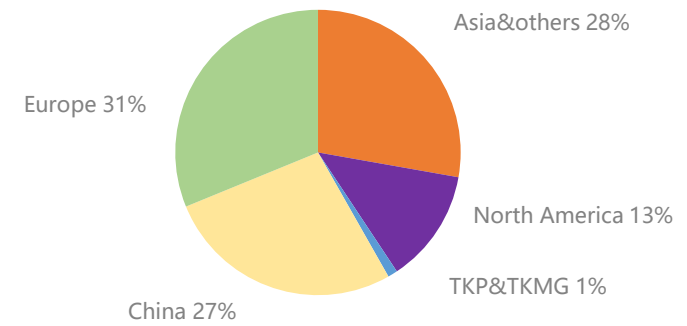




Asia&others North America TKP&TKMG China Europe

What we do






Medical Mold-Laboratory Consumables

- ◆ Modular mold design
- ◆ Industry-leading cycle time
- ◆ Excellent production stability
- ◆ New product and quick pilot development
- ◆ Capacity of Big Project Management, 50 molds


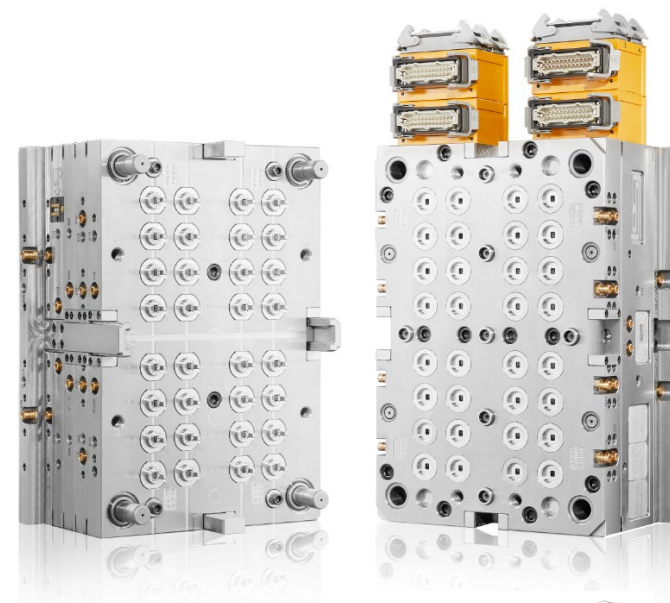
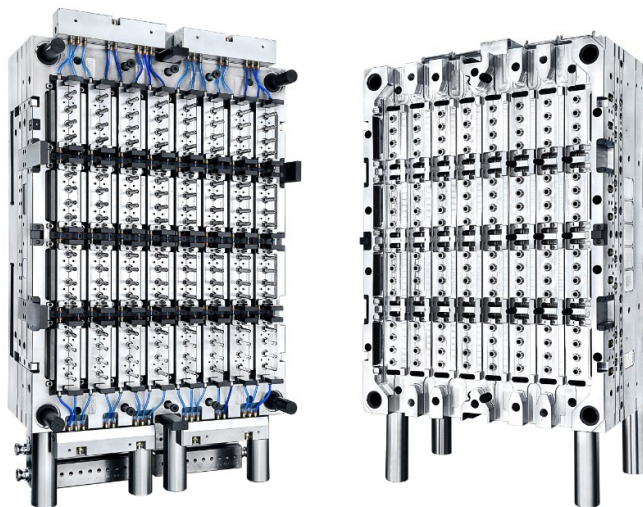
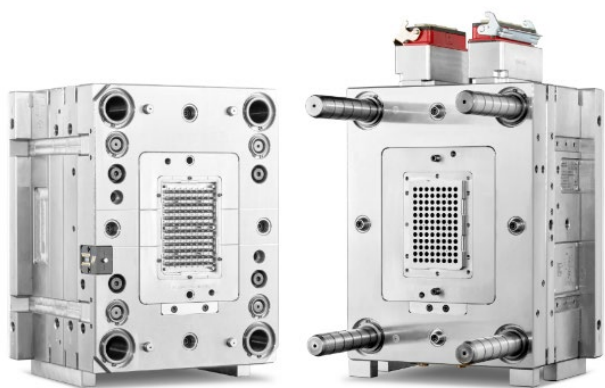


- ◆ Modular mold design
- ◆ Industry-leading cycle time
- ◆ Excellent production stability
- ◆ New product and quick pilot development
- ◆ Capacity of Big Project Management, 50 molds

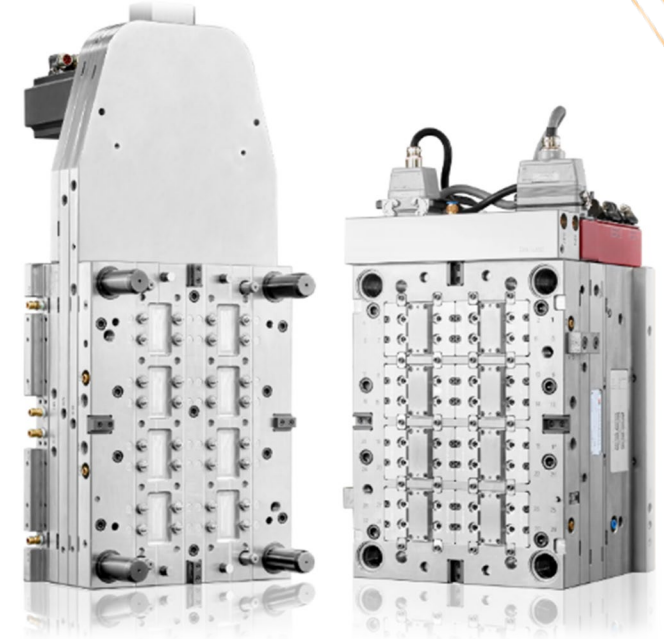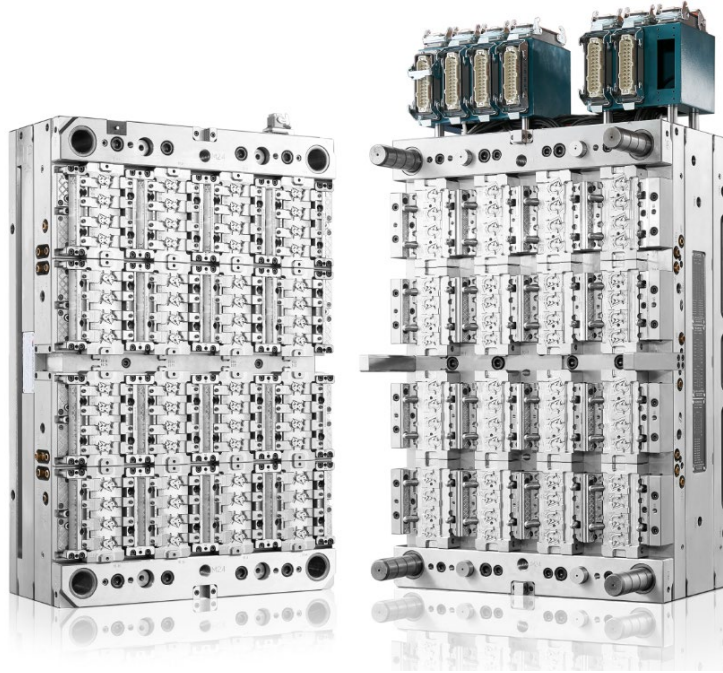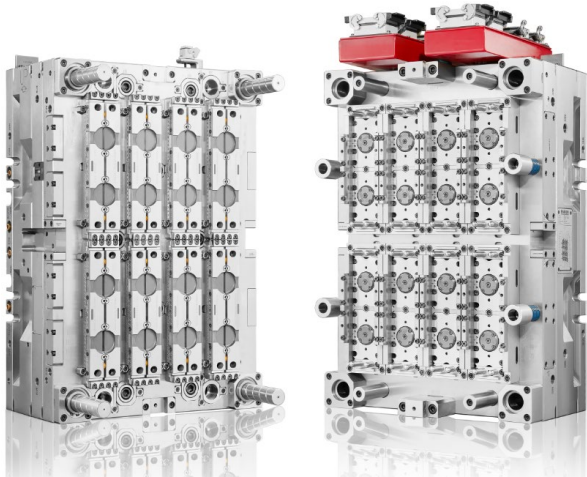





Medical Mold-Hemodialysis

- ◆ Modular mold design
- ◆ Industry-leading cycle time
- ◆ Excellent production stability
- ◆ New product and quick pilot development
- ◆ Capacity of Big Project Management, 50 molds

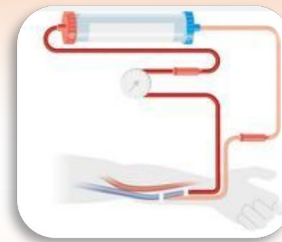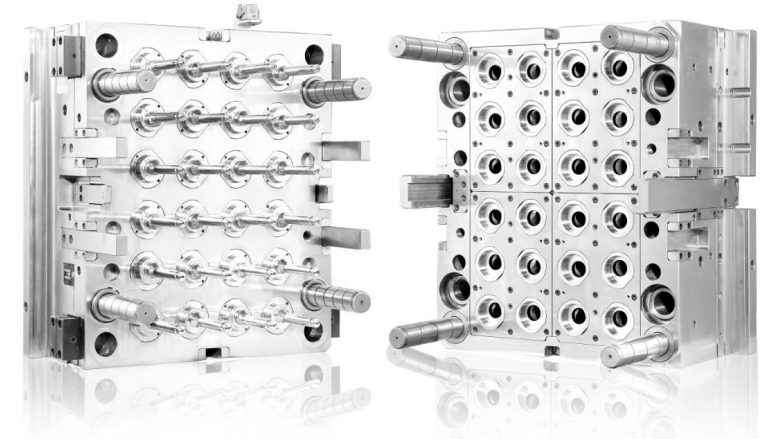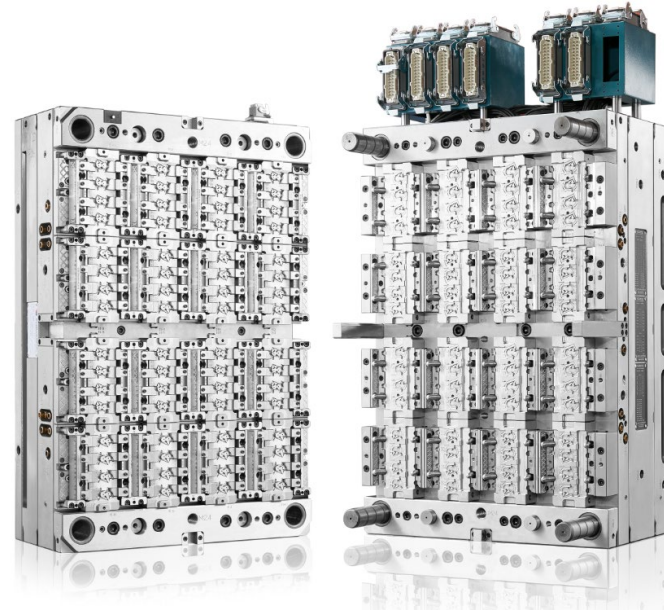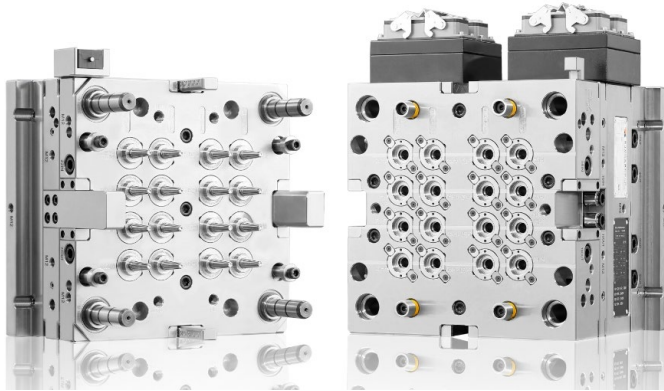


Medical Mold-Syringe Series



- ◆ Modular mold design
- ◆ Industry-leading cycle time
- ◆ Excellent production stability
- ◆ New product and quick pilot development
- ◆ Capacity of Big Project Management, 50 molds

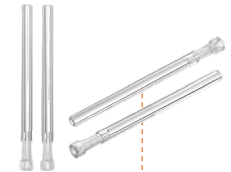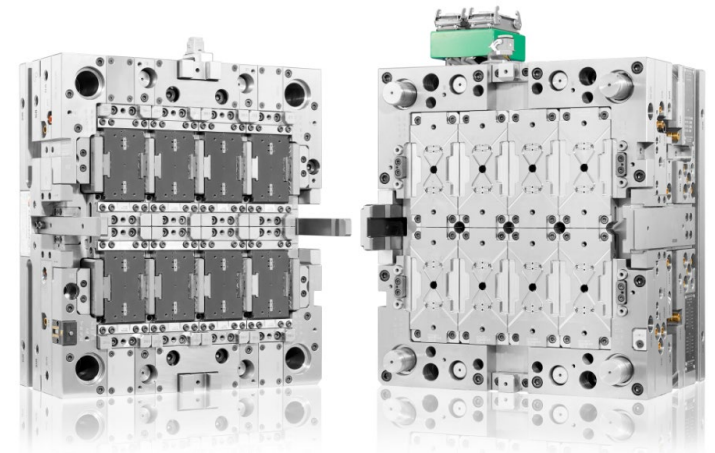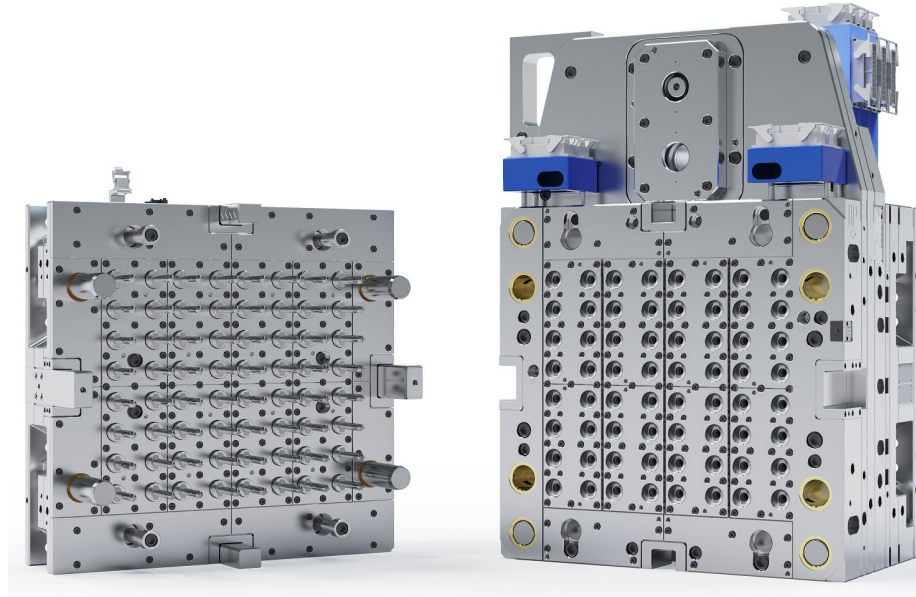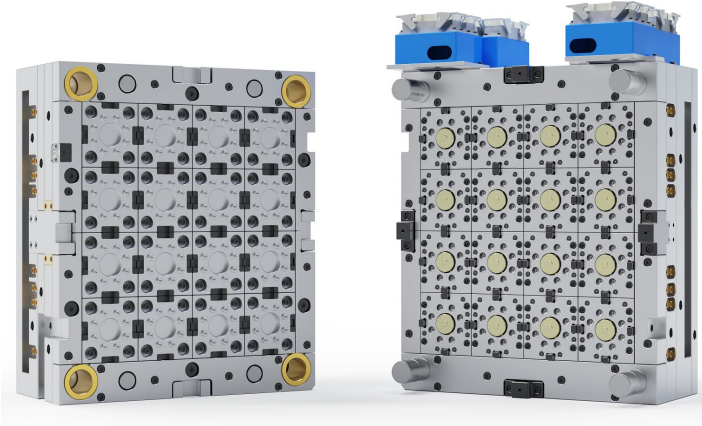




Why We Can

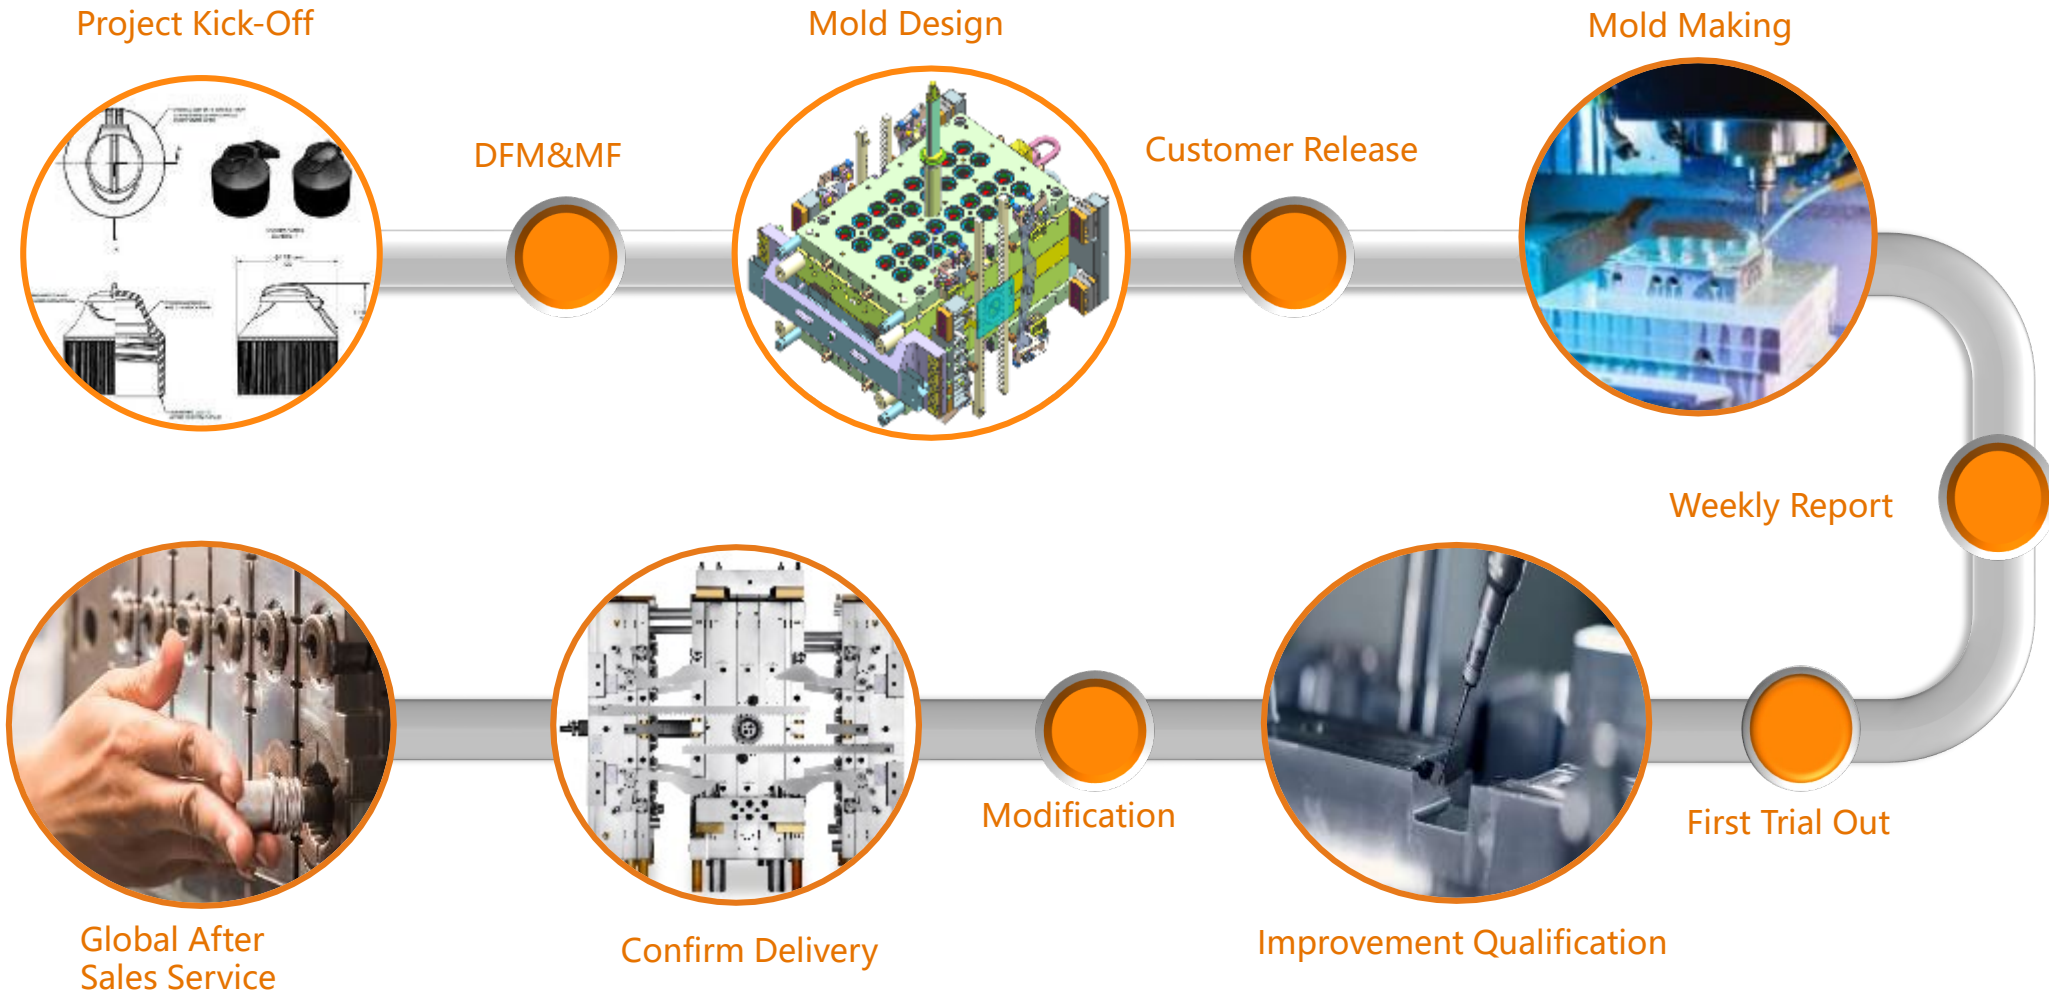

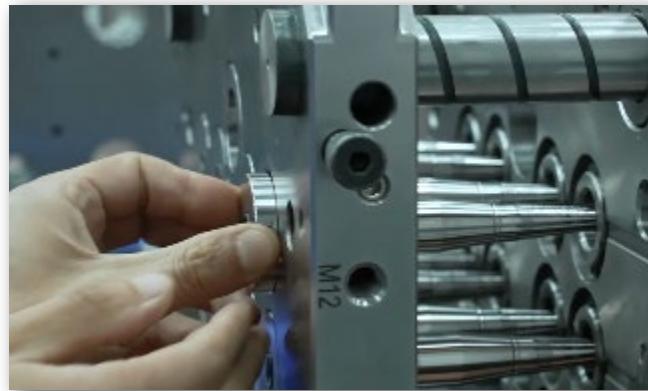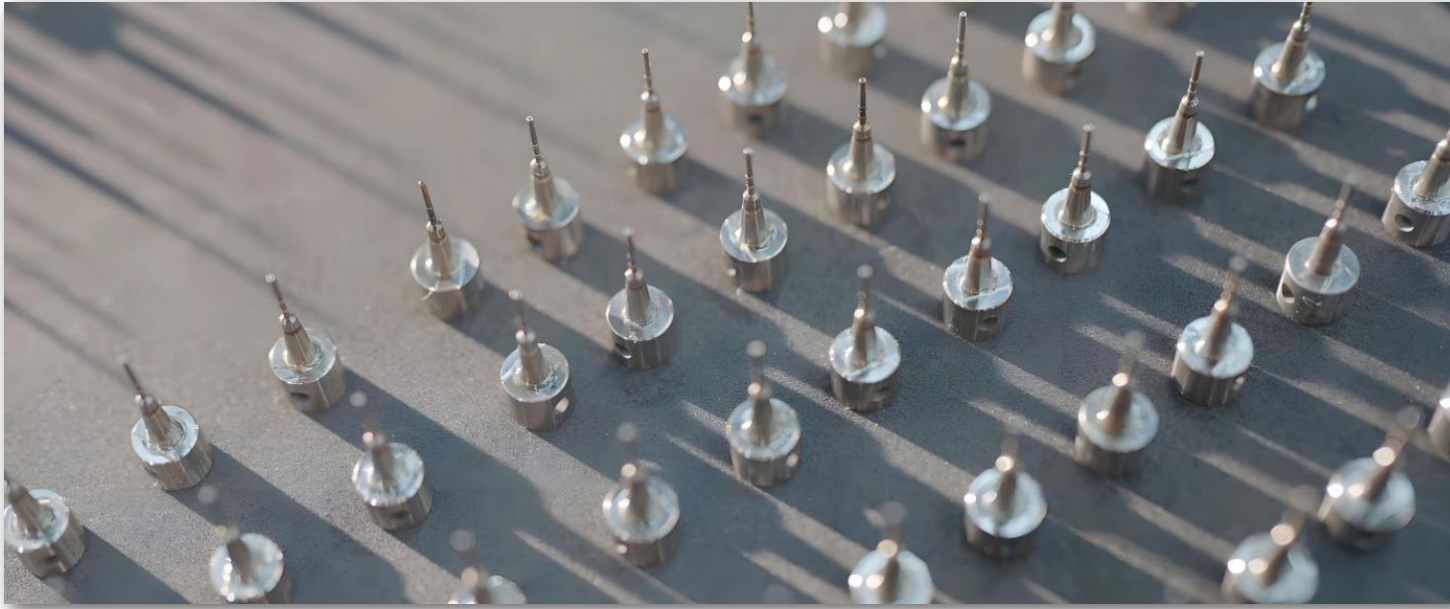

- ◆ Full temperature and humidity control clean workshop
- ◆ Ensure precise part dimensions are controlled according to machining tolerance data
- ◆ Direct assembly without manual mold matching and flying mold

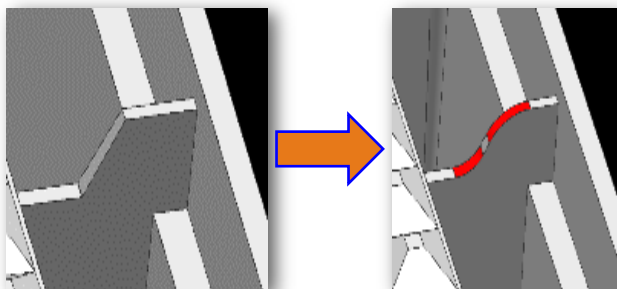

Early Technical Support DFM Service Started in 2010
Product design and feasibility study team providing mechanical design service on tooling optimization, project appraisal and solution proposal.

We Use UG NX8.5/12
Expertise with 30+ years' experience from European top tool shop.
400 Engineering Staff in TK Group.

Major Machines	Qty
CNC Milling Machine	104
5-Axis CNC Milling Machine	21
EDM Machine	55
EDM Wire-cut Machine	19
Grinding Machine	59
CNC Jig grinder	5
EDM Hole Drilling Machine	3
Lathe	7
High Precision Hard Turning	3
CMM	21
IMM for test (Including 2k)	18(6)
Flexible automatic production line	8
Automation unit	5+3



Studer Universal Grinding Machine



Hauser CNC Jig Grinder




Agiecharmilles EDM Machine



Yasda Jig Bore High Speed CNC



+56 meters dark room, equipped with 10 robots , CNC, EDM and CMM systems.

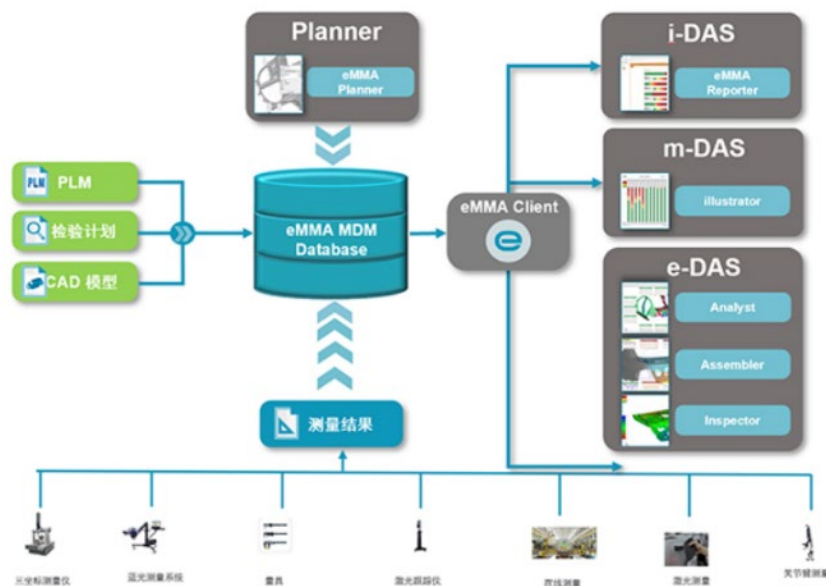


Quality Management System:

Centered on digitalization, the system integrates end-to-end quality management with rigorous controls at every stage to ensure molds and finished products comply with quality standards.



Dimensional:

- ◆ CMM (Coordinate Measuring Machine)
- ◆ OMM (Optical Measuring Machine)
- ◆ Roughness Measuring Machine
- ◆ Optical Surface Profiler
- ◆ Digital Caliper
- ◆ Ring Gauge
- ◆ Thickness Meter
- ◆ Three latitude optical scanner

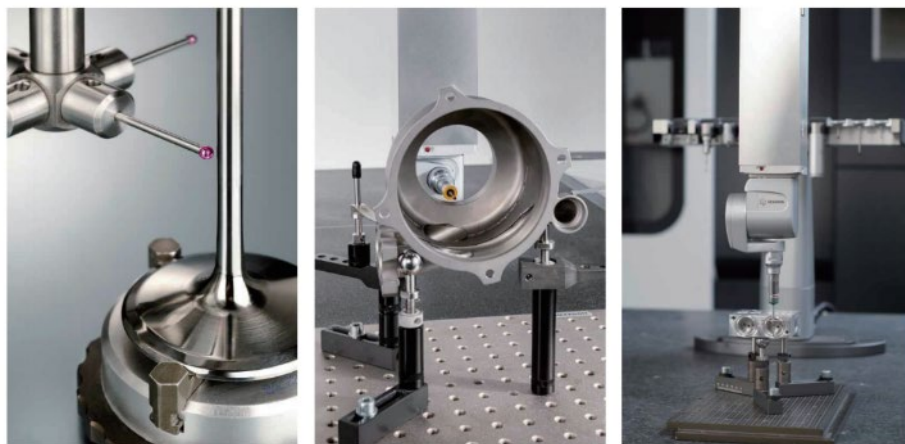

Conformal Cooling Channel by Direct Metal Laser Sintering (DMLS) and Diffusion Bonding :

- ◆ TK Mold offers in-house metal additive manufacturing to produce conformal cooling inserts, providing an integrated solution for high-performance tooling with up to 35% cycle time reduction and improved dimensional stability
- ◆ Conformal Cooling channels precisely follow the shape of the molded part
- ◆ Minimize warpage, sink marks, and internal stress in molded components
- ◆ Increase production efficiency , ideal solution for high-volume and precision molding
- ◆ Max. work piece dimensions: 250 × 250 × 380 mm (Height)

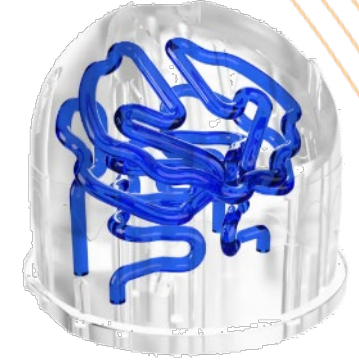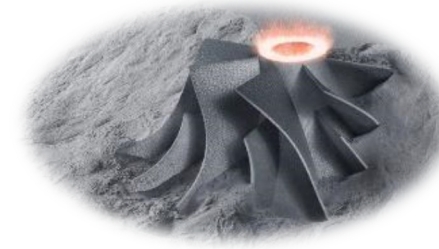

Strategic Partnerships with Industry Leaders




We collaborate with industry-leading suppliers to ensure the highest standards in steel, heat treatment, hot runner systems, and production equipment—delivering reliable performance for every mold we build.



Clamping Force	Brand	Robot	Visible water flow	2 nd Shot	Remarks
100T	Arburg	1	YES		Arburg-LSR material
150T	Fanuc	1	YES		
180T	JSW	2	YES	1	Rotation Table L Type(2K)
200T	Milacron	1	YES	1	Rotation Table L Type(2K)
250T	Krauss-Maffei	1	YES	1	Rotation Table L Type(2K)
280T	JSW		YES		
400T	HUSKY		YES		High Speed
450T	JSW		YES		
500T	Netstal SynErgy	1	YES	1	Rotation Table L Type(2K)
650T	ENGEL		YES	1	Rotation Table L Type(2K)
1000T	Krauss-Maffei	1	YES		
1500T	ENGEL	1	YES	1	Rotation Table L Type(2K)

Our validation process follows scientific molding best practices to establish a stable, repeatable process window.

By collecting key data across from pre- to post-molding phases, we ensure part quality, dimensional consistency, and tool performance from first shot to production

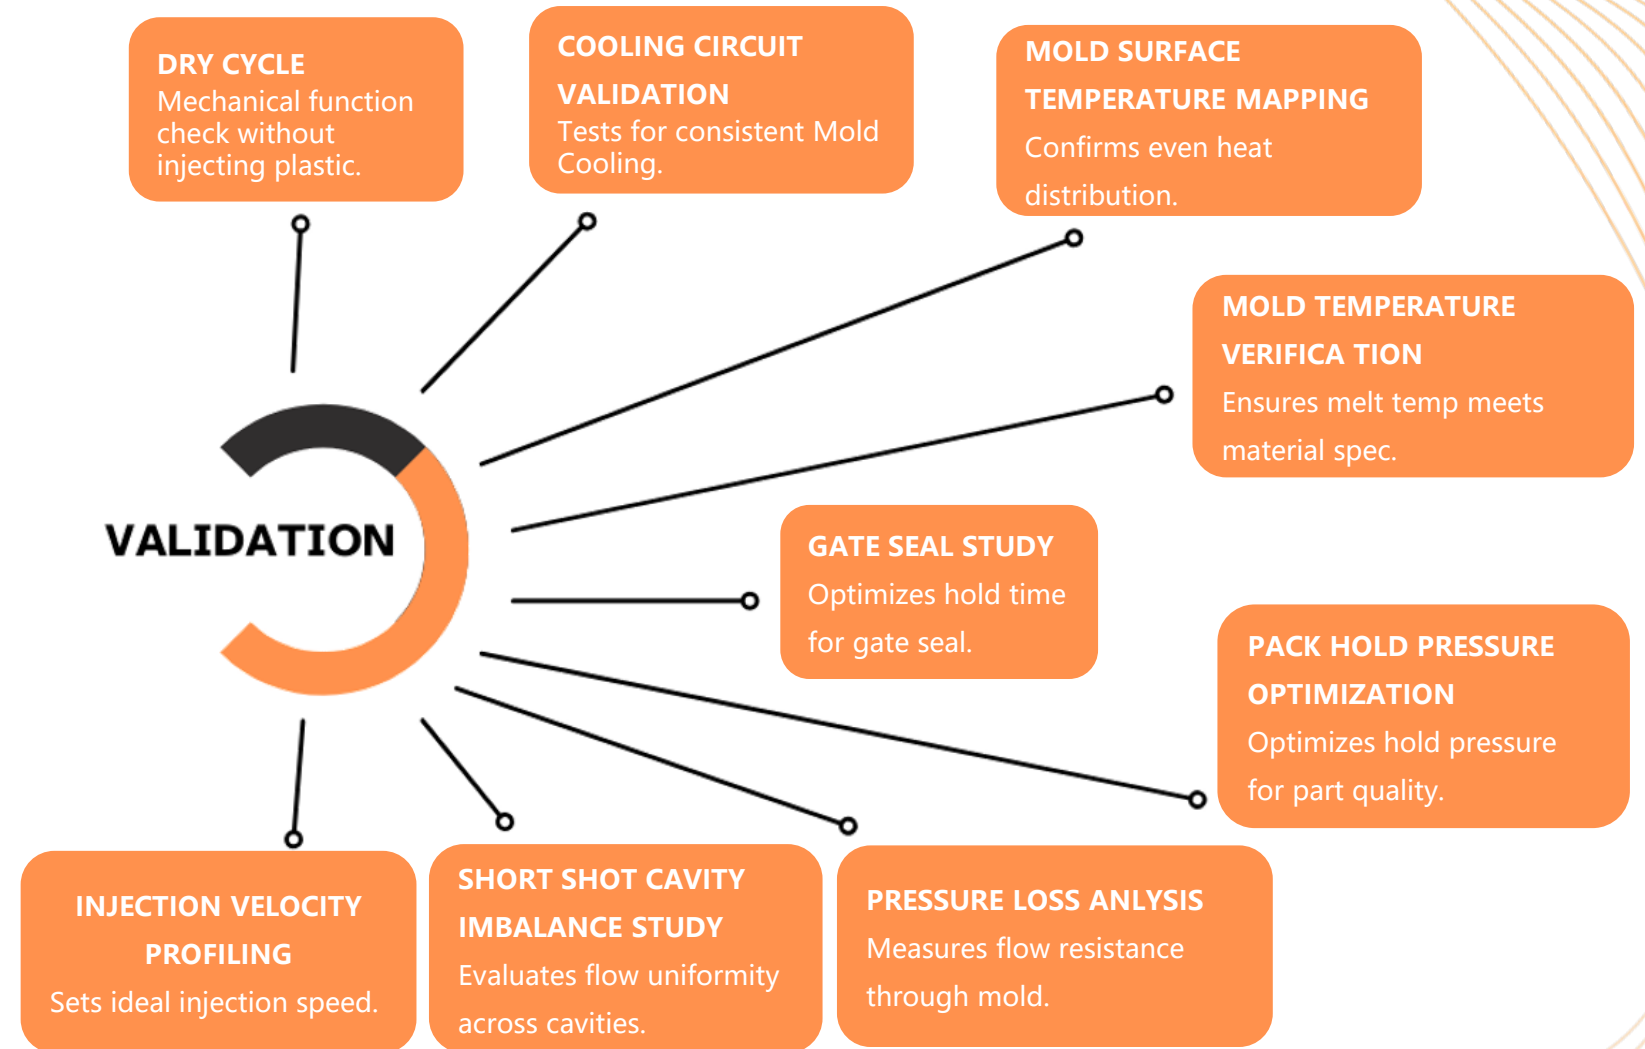

- ◆ Tensile testing
 - ◆ Torque test
 - ◆ Sealing test
 - ◆ Leakage testing
 - ◆ Oil pouring wall hanging test
 - ◆ High temperature; Low temperature; Negative pressure; Shelf life testing.....
- ◆ The professional inspection team provides full - process quality control services, covering Geometric Dimensioning and Tolerancing (GD&T), Process Validation Testing (PVT) and Failure Analysis (FA). Through integrated technical solutions, the mold development cycle is shortened.





Hemoclip-Medical tool part, 64 cavity molds with 10s cycle time, 12 molds as one launch and delivery.



8 high-cavitation stack molds (8+8 cavity) launch and delivery as a package, running 12s cycle time per tool.

Big capacity and flexibility to finish +1000 cavity big project in short time.



PHILIPS
Award For
Sustainability
Improvement



Yihai Kerry
Award For Supplier
Excellence



Jabra
Award For Quality
supplier



LuxshareICT
Award For Excellent
technology supplier



Wahl clipper
Corporation
Award For 100 years
of tradition

Dragon Boat Race



Graffiti game



Gift of Santa Claus



TK Charity Fund



Workers' Congress



Public Service Activity



Thank You!



www.tkmold.com



+86-755-2369 0000



sales@tkmold.com